

OPERATING INSTRUCTIONS

Please read the following instructions carefully before connecting this timer to electrical appliances.

IMPORTANT

Don't plug in an appliance where the load exceeds 13 Amp. Always ensure the plug of any appliance is fully inserted into the timer outlet. If cleaning of the timer is required, remove from mains power and wipe timer with a dry cloth.

DO NOT IMMERSE TIMER IN WATER OR ANY OTHER LIQUID.

Heaters and similar appliances should never be left unattended during operation. The manufacturer recommends such appliances not be connected to timers.

Keyboard Definition

- a. MASTER CLEAR: Clear all data in memory including current time and all programs.
- b. RANDOM: Set or cancel random function.
- c. CLOCK: Set current time combined with buttons WEEK, HOUR, MIN. Select 12 or 24 hour mode combined with button TIMER. Activate summertime function combined with button ON/AUTO/OFF.
- d. TIMER: Set programs combined with buttons WEEK, HOUR, MIN. Select 12 or 24 hour mode combined with button CLOCK.
- e. ON/AUTO/OFF: Select operating modes of timer.
- f. WEEK: Set week combined with button CLOCK or TIMER.
- g. HOUR: Set hour combined with button CLOCK or TIMER.
- h. MIN: Set minute combined with button CLOCK or TIMER.
- i. RST/RCL: Override programs or recall the overridden programs.
- j. LED: Shows status of power output. When the indicator is ON, there is power output. When the indicator is OFF, there is no power output.

General Features

- 1. 10 ON/OFF programs with 1 minute step.
- 2. Output LED indicator.
- 3. Display with second.
- 4. MANUAL ON/AUTO/MANUAL OFF selectable.
- 5. Random function with a randomly on 10–31 minutes between 6:00 PM and 6:00 AM.
- 6. 12/24 hour mode selectable.
- 7. Summer time function available.
- 8. 16 combinations of day or blocks of days available as follows:

MO	MO, TU, WE, TH, FR
TU	SA, SU
WE	MO, TU, WE, TH, FR, SA
TH	MO, WE, FR
FR	TU, TH, SA
SA	MO, TU, WE
SU	TH, FR, SA
MO, TU, WE, TH, FR, SA, SU	MO, WE, FR, SU

INITIAL OPERATION

- 1. Plug the timer into a regular 240 Volts power outlet and turn the power on. Leave for approximately 14 hours to charge the Memory Back-up battery.
- 2. Clear all current information by pressing MASTER CLEAR button with a sharp object such as a pen or pencil after charging.
- 3. The timer is now ready to be set up for use.

SETTING CURRENT TIME

- 1. Press CLOCK button and hold, simultaneously press WEEK button until the actual day is displayed. Continue by pressing HOUR or MIN button until the current hour or minute is displayed. When setting, the buttons WEEK, HOUR or MIN can be held down for rapid forward counting.
- 2. Release both buttons. The week and time will be set.
- 3. To reset incorrect time, repeat above steps.